Rotary Distributors


Amwell "reaction driven" and "motor driven" rotary distributors offer proven performance. Two, three and four arm distributors are available in up to 150 ft. diameters, to meet standard or high flow rate applications. Our exclusive ball joint manifold/arm connection eliminates center column stress and provides for arm adjustment. MULTIFLO® automatically adjustable brass nozzles maintain even flow and distribution over a wide range of flow and head conditions.

MULTIFIO* brass orifice nozzles resist corrosion and maintain even flow and dispersion.

- Motor Driven
- Reaction Driven
- Exclusive MULTIFLO® brass orifice nozzles
- Exclusive center column/arm ball joint design
- Two, three and four arm designs
- Standard and high flow rate capability

Your natural resource...

AMWELL

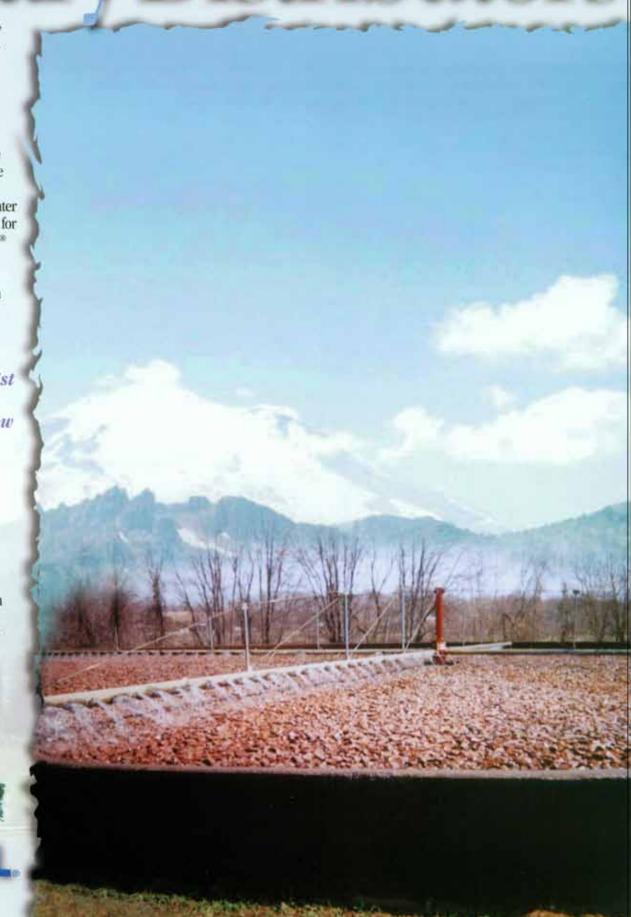

Quality by design

As a leading manufacturer of rotary distributors, Amwell offers proven quality and dependability, in both "reaction driven" and "motor driven" designs. Choose from two, three, or four arm distributors in diameters up to 150 ft.

Where flow rate and hydraulic pressure is insufficient to drive the arms, Amwell offers motorized center columns to handle any need. A large lower guide bearing is provided for stability and is protected by multiple spring loaded mechanical seals which are capable of withstanding high hydraulic surges.





For comprehensive product specifications, drawings and additional options for any system, contact Amwell beadquarters or your local Amwell Representative.

Exclusive Amwell MULTIFLO® brass nozzles maintain an even flow and dispersion rate throughout the entire length of each distribution arm. These free draining nozzles made from non-corrosive brass are available in 3/4" and 1-1/4" diameter sizes. Each size nozzle is available with a series of weighted and automatic, selfadjusting spreaders to provide excellent flow distribution on the trickling filter media. This nozzle design has proven to be very effective over a wide range of flows and head conditions.





600 N. Commons Drive, Suite 116 • Aurora, IL 60504 • Phone: 630-898-6900 • Fax: 630-898-1647 E-mail: amwell@amwell-inc.com • Internet: www.amwell-inc.com